

Updating Torqo model 1600 firmware

1. Get the Torqo2 Update.zip file from your email containing the file sharing site.
 - a. Unzip the file to a USB Flash drive. The file Torqo2 Update.exe and the folder Files to Copy must be placed in the root of the USB Flash Drive.
 - b. Plug the USB Flash drive into the USB port underneath the Torqo Model 1600 touchpanel. You will need to unscrew the cap from the USB port.
2. Exit from the Torqo application to the Windows XP Embedded desktop
 - a. Press the Test Profile button in the lower right of the graph screen shown in Figure 1
 - b. Press the Main Menu button at the bottom left of the Select Test screen shown in Figure 2

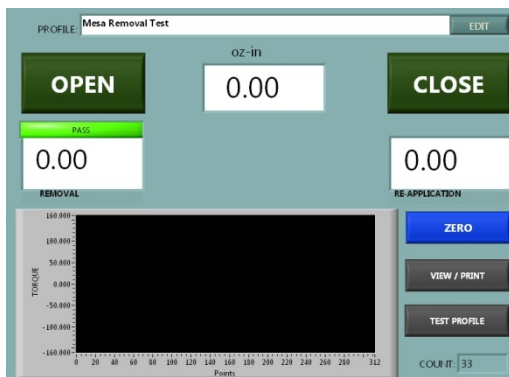


Figure 1

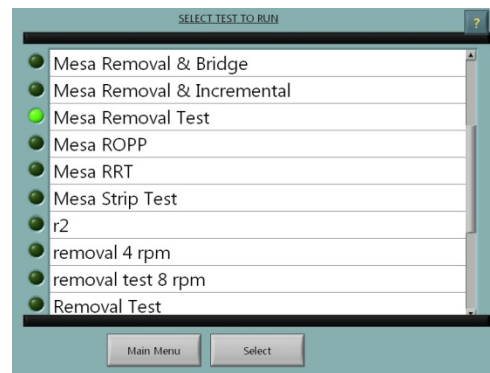


Figure 2

- c. Press the Exit to Windows button seen in the lower right of the Main Menu screen shown in Figure 3. The Program/Run key switch must be in Program position for the Exit to Windows button to be visible.
 - d. Press the OK button shown in Figure 4.

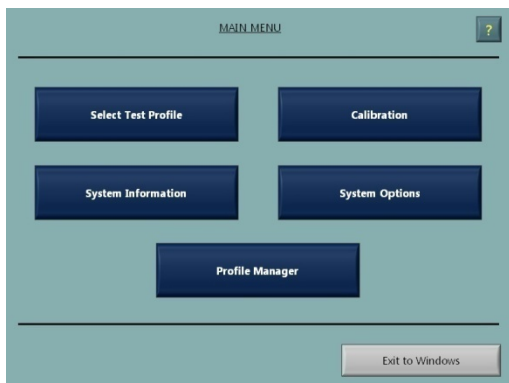


Figure 3

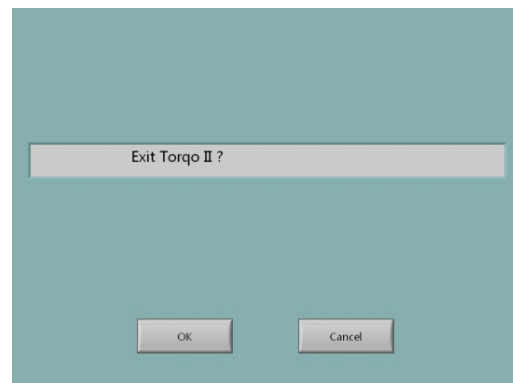


Figure 4

- e. The Windows XP Desktop will appear similar to the one shown in Figure 5.



Figure 5

3. Run the Torqo2 Update.exe application on the Torqo model 1600 touchpanel PC.
 - a. Run the Explorer by touching and holding the Start button on the lower left of the Windows Desktop shown in Figure 5. You might need to use your fingernail or a pen cap or pencil eraser to hold the Start button down. Choose Explore from the options to see the Explorer window. Select the Removable Disk (E:) and the screen should appear similar to Figure 6.

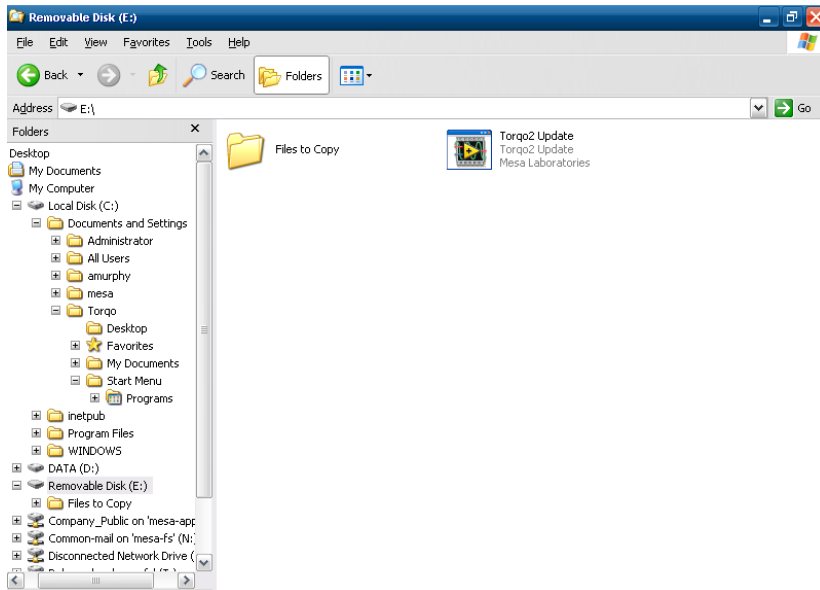


Figure 6

- b. Touch the Torqo2 Update icon on the upper right side of the Explorer screen twice to run the application.
- c. When the application completes the screen should look similar to Figure 7 and the Exit button will become visible. Touch the Exit button at the bottom center of the screen to exit the Torqo2 Update application. If there were any errors they would be displayed on the screen so you could read the messages.

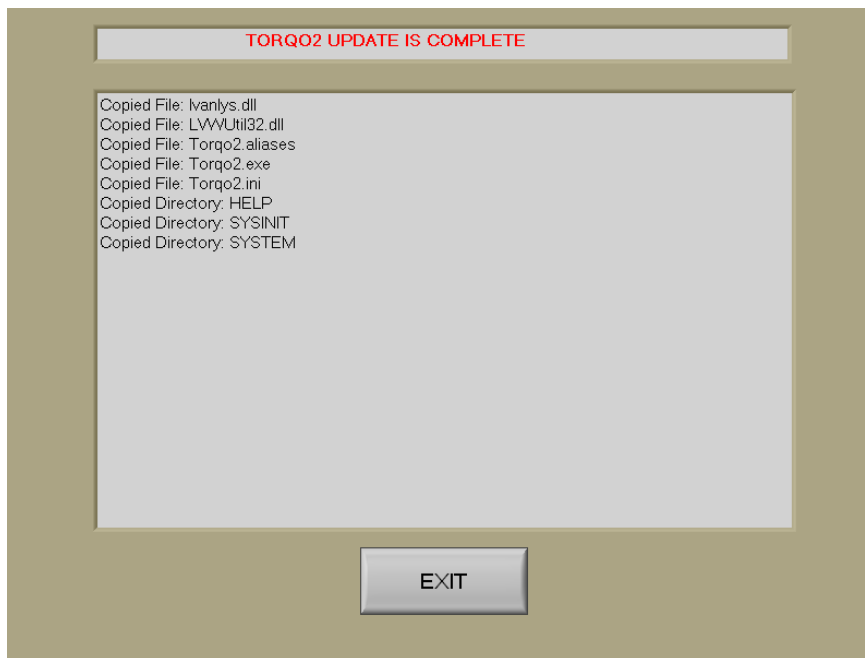


Figure 7

- d. If you see a message like Figure 8 then the Torqo is a model 1590 and you should use the Torqo2 Update package for the model 1590.

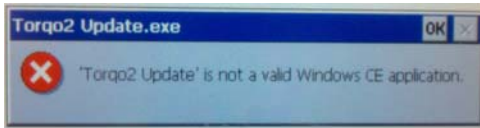


Figure 8

- e. Remove the USB Flash drive from the Torqo and reattach the threaded cover.
 - f. Close the Explorer by touching the red X in the upper right corner. You may need to use your fingernail or a pen cap or pencil eraser.
 - g. Restart the Torqo Application by touching the Torqo2 icon on the top left of the Windows desktop twice rapidly.
 - h. Verify the firmware version from the Main Menu screen by touching the System Information button. The firmware version will be listed in the Software Version display.
4. This completes the Torqo firmware update.