

Model 1606 Compressed Ring Chuck


Compression Ring Chuck

The Model 1606 compressed ring chuck is used for gripping primarily smooth sided caps. However this chuck may also be used on a finely serrated cap or a non-uniformly serrated cap.

In the beverage industry this chuck can be used on aluminum roll caps and lug caps, while in the pharmaceutical industry this device is used on steel continuous thread type caps.

12mm to 100mm caps can be accommodated in this chucking system.

The exploded view to the right shows the major components of the chuck and how the change parts are assembled

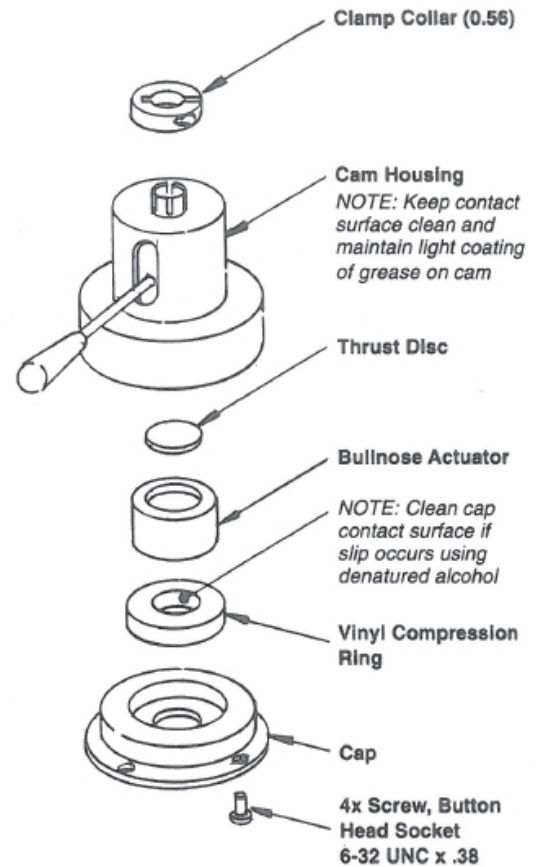

EDM Chucks



An EDM style chuck is frequently used for gripping finely serrated caps with serrations that are greater than 0.006 inches deep but less than 0.030 inches deep. These chucks are made from 303 stainless steel to insure long life and prevent corrosion.

This type of cap is frequently found in the beverage industry on bottles like Coca-Cola, Pepsi-Cola and the like.

Chucks are available for many different manufacturers caps and therefore one should consult the factory for additional information before ordering.