


Universal 4-Post Cap Gripper

SureTorque Accessories

Historically, SureTorque machines incorporated a patented, air actuated chuck allowing the most convenient and automated cap gripping solution on the market. Unfortunately, custom molded collets can significantly increase the overall cost of the torque testing systems and complicate the changeover process. Recognizing the need for a lower cost and more universal tooling, Mesa Laboratories developed a manually actuated 4-post cap gripper.



Varying cap sizes require multiple molded or serrated chucks

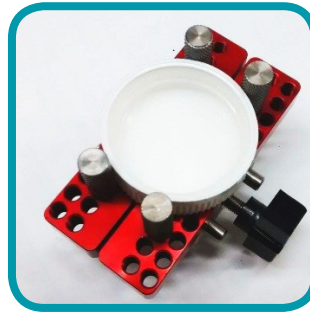

The universal chuck is compatible with most caps

Features

- Fits SureTorque ST-120S, ST-S3 models (firmware update may be required).
- Adjustable, knurled gripping posts compatible with various cap OD (5-89mm).
- Compatible with various serration patterns and cap types (CT, CR, ROPP, etc)*.
- Eliminates the need for multiple chucks.
- Non-destructive (does not leave marks when used properly).
- Compatible with smooth caps (torque limitations apply).

[Contact](#) a Mesa representative today for pricing and more information.

**The 4-post cap gripper is not ideal for "high volume" production floor applications. The composition of closure, serration pattern, upper torque specification limit and cap/bottle shape may influence compatibility and performance. Before placing an order, please send sample closures to our customer service for verification.*